

Document: #HT000055

Document Title: Advance PTFE Sheet

Product(s): T-1000, T-300/375

Procedure:

On the T-1000:

Lower the Jaw.





In the Right Side of the Seal Frame, turn the bottom shaft 1/2- turn Counter-Clockwise. This will advance the PTFE Sheet.




Replacement PTFE Sheet:

Part Number

TP-300500



On the T-300/375:

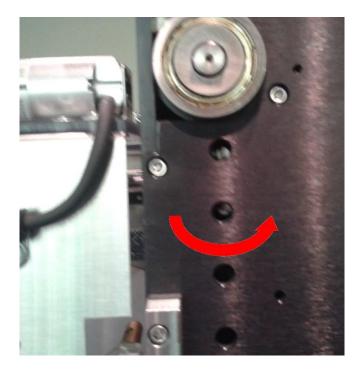

Turn the Bottom Shaft Counter-Clockwise a 1/2-turn.

Replacement PTFE Sheet: Part Number TP-T8MA00130